


## DigiLink Manager SNMPv2, HTTP Element Management System (EMS)

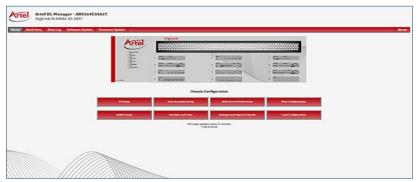

**DigiLink Manager Home Page** 

# DigiLink Manager is an HTTP and SNMPv2 based Element Management System (EMS) for monitoring, configuration, and management of DigiLink chassis, function modules, optics, and power supplies.

Embedded in the DigiLink chassis and all its elements, it requires no external software or add-ins to monitor and configure all active elements of the platform. DigiLink Manager is compatible with all HTTP compatible systems, is capable of monitoring and managing

multiple chassis through a single Ethernet connection and features a time-stamped log of key information about chassis activity. With integrated SNMPv2, DigiLink Manager can easily integrate into third party NMS.

#### DigiLink integration with Dimetis BOSS LINK Manager®


Artel and Dimetis have partnered to offer a complete NMS and scheduling solution for your DigiLink media transport network. Dimetis BOSS LINK Manager® simplifies engineering, planning and operation of networks independently from the infrastructures deployed. Users can create and deliver services across wide area networks in seconds, through a simple graphical user interface. Scheduling, network performance, fault management, and the discovery capabilities of BOSS LINK Manager® combined with the



Configure and route.

simplicity of installation and support of DigiLink make deploying and supporting media transport networks easier and more cost effective than ever.

- Full featured Network Management System
- Scheduling and service orchestration
- Inventory tracking
- · Network performance monitoring
- Root cause analysis and fault management
- Reporting, SLA management and data collection

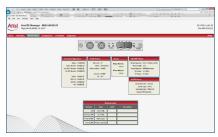

Monitor function module status.

### FFATURES

#### SNMPv2 and web monitoring and management

- DigiLink chassis
- · Function modules
- · Power supplies

#### Monitoring

- · Auto detect cards and configurations
- Major and minor alarms and events
- · Detailed card status
- · Alarm status
- · Alarm details
- · Receive light levels
- Temperature
- · Video status and rates

#### **Provisioning**

- Configure function (transmitter/receiver/repeater)
- Change input source (BNC or other module in chassis)
- Configure IP settings
- Enable or disable features and channels

#### Non-volatile time stamped event log

- Major/minor alarms
- Startup sequence
- · New hardware installation
- Configuration modifications
- Video presence
- · Update of firmware
- Revision status

#### Maintenance

- Download/upgrade firmware on function modules, power supplies and backplane
- Download/upgrade management software



Dimetis BOSS LINK Manager®

